


### EXPANSION JOINT IN FLAT ROOFING

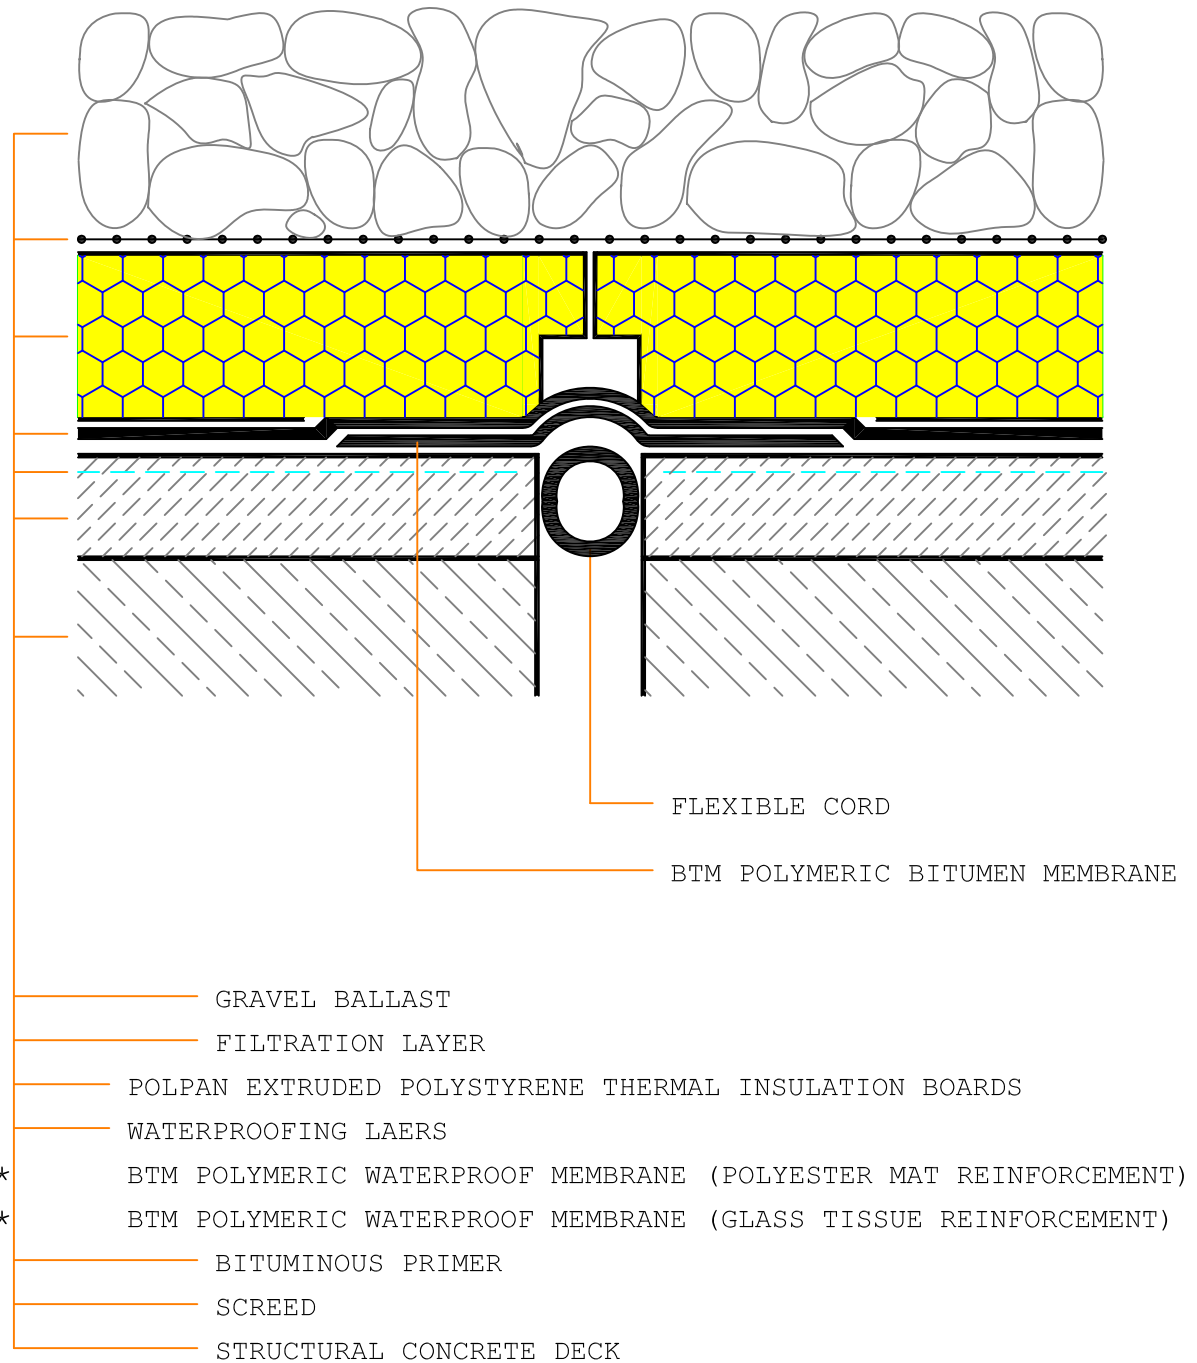

\* Please consult BTM OFFICES for the types of ELASTOBİT, PLASTOBİT and POLİBİT waterproof membranes

not to scale